

DE VIELLE®

Oil Filled Radiator 2500W

INSTALLATION & INSTRUCTION MANUAL
Model: DEF973987



PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

Important Safety Instructions

Thank you for purchasing our De Vielle Heater. Please keep this instruction manual in a safe place, along with the purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- Before turning on, ensure the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance outdoors
- Power plug must be removed from power socket before cleaning, servicing, maintenance or moving the appliance.
- When the appliance is not in use, switch it off and unplug it.
- The appliance should be placed on a flat surface when operating to avoid overturning.
- To reduce the risk of electrocution, never operate this product with wet hands, submerge in water or spill liquids into the product.
- Do not insert any objects into the appliance.
- Do not kink or damage the power cord.
- Improper installation may result in the risk of fire, electric shock and or injury to persons.
- The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Care and Cleaning Instructions

The appliance is not designed to be dismantled without special tools. Please do not attempt to separate the unit.

1. Ensure appliance is disconnected from the power supply and switched off before attempting to clean.
2. Cleaning the exterior of the unit should only be attempted with a slightly damp, soapy cloth. After wiping down the unit with the soapy cloth, dry any wet spots with a dry cloth.
3. When not in use, pack the heater into its original box for best protection and store in a cool, clean and dry location.

Caution: Never immerse the heater in water for cleaning.

Assembly

Ensure the power cord is not plugged in before attempting to assemble the heater. The only assembly required for the oil heaters are attaching the wheels onto the main unit. Follow these procedures:

1. Turn the unit upside down so that the wheels can be attached. The heater should only ever be in the upright position unless the wheels are being removed or put on.
2. The packaging should come with 2 U-bolts. Fit one of the U-bolts between the last two fins on one of the sides.
3. The unit should also come with 2 wheel brackets. Fit the wheel bracket over the U-bolt ensuring that the corresponding holes line up so that they can be screwed tightly.
4. Use the wingnuts provided to secure the wheel bracket to the U-bolt by turning it reasonably tightly with your hands. No tools are necessary.
5. Repeat the process to attach the wheel onto the other side.
6. Turn the heater to the upright position and let the oil settle for at least 15 minutes before turning on.

NB: Please ensure heater is in the upright position with the wheels attached to the bottom. The heater is fitted with a safety device and will *only* operate in the upright position.

Using your Heater

1. Place the heater on a flat surface, away from flammable objects.
2. Plug the power cord into the wall socket when ready to use.
3. Press the power switch to turn the heater on. The indicator light on the switch will turn on if the heater is on. Use the first switch for a low heat, the second switch for a medium heat and have both switches on for high heat. The maximum heating power output is 2500W.
4. Use the variable heat thermostat to regulate the desired heating temperature. The temperature increases as you move the dial clockwise towards the MAX direction.
Note: The indicator lights on the switches may turn on and off as the heater regulates the temperature.

Using your Heater

- Use the appliance only for the mentioned purpose, namely as a heater for domestic use. Do not use it as any other application as it could be dangerous.
- Do not operate the heater near flammable objects (furniture, curtains, shelves etc).
- Do not operate the heater near liquids (bath-tubs, showers, water basins, swimming pools etc).
- Do not cover the appliance when it is operating to avoid overheating.
- Never attempt to remove the front grille of the heater.
- Do not put the cable on the appliance when it is still warm.
- Do not connect the appliance to extension cords or multiple outlets.
- Never operate the appliance immediately below an outlet.
- Never connect the appliance to a thermal control device or a time switch to avoid overheating risks when the radiator is moved or covered.

Caution: This appliance gets extremely hot during operation and should be handled with care. Be careful of getting burnt. Never put flammable objects on or near the appliance as they could set alight.

Timer operation

The timer face consists of a moveable numbered band with moveable red pins and a fixed centre plate.


When the moveable red pins are slid towards the centre plate the timer is OFF and when slid towards the outer numbered band the timer is ON. Each red pin corresponds to 15 minutes operation. A switch is fitted to bypass the timer if required.

- Rotate the timer dial until the current time is opposite the pointer.
- Slide the red pins corresponding to the required ON time towards the outer numbered band.
- The red pins corresponding to the required OFF time are slid towards the inner band.
- To operate under timer control, slide the bypass switch to the "O" position.
- To bypass the timer, slide the bypass switch to the "I" position.

EXAMPLE:

Suppose it is now at 11:00PM. Rotate the timer until "23" is opposite to the pointer (i.e. Position A).

For operation between 8:00AM and 3:00PM, slide the bypass switch to "O", all the red pins between "8" and "15" (i.e. Area B) are slid towards the outer band and those between "15" and "8" are slid towards the inner band.

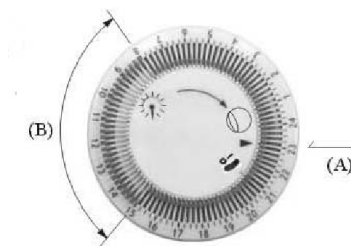

NOTE:

For correct timer operation the radiator must be connected to the power supply and the power switched on. The second hand will indicate when power is connected.

Important Features

- 1 Whisper-quiet operation**
The heater operates in silence as there are no moving parts.
- 2 Variable heat thermostat**
Use the dial to adjust the temperature setting to your desired comfort level.
Turn clockwise to increase heat.
- 3 Convenient cord storage**
Power cord can be wound and clipped at base of heater when not in use.
- 4 Wheels**
The wheels form the base of the heater and allow the unit to be moved freely around the room.
- 5 Heating fins**
All 11 fins will heat up when the unit has been switched on.
- 6 Timer**
The radiator can be set up to operate at a desired time.

PLUG REPLACEMENT

If the plug is damaged and requires replacement, follow the wiring instructions supplied with the new plug.

- The green and yellow wire must be connected to the terminal marked with the letter E or the earth symbol.
- The blue wire must be connected to the terminal marked with the letter N.
- The brown wire must be connected to the terminal marked with the letter L.
- A 13 amp plug to BS 1363 must be fitted a 13 Amp fuse to BS 1362.
- * For your safety and protection, this unit is earthed through the power cord plug when plugged into a matching wall socket. If you are not sure whether the wall sockets in your home are properly earthed, consult a qualified electrician. Do not use plug adaptors or extension cords with this unit.

GUARANTEE

Please keep your receipt as this will be required for any claims under this guarantee. This appliance is guaranteed for 2 years after your purchase as described in this document. During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.

DeVielle undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

- you promptly notify the place of purchase or DeVielle of the problem; and
- the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by DeVielle

Faults that occur through, improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of DeVielle, repair or alteration by a person other than a person authorised by DeVielle or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee. The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use. If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.



De Vielle,

Unit 5, Northern Cross Business Park, North Road, Finglas, Dublin 11, Ireland

TEL: +353 1 823 9200

EC Declaration of Conformity

We herewith declare, De Vielle, Unit 5, Northern Cross Business Park, North Road, Finglas, Dublin 11, Ireland, that the following product complies with the appropriate basic safety and health requirements of the EC Directive based on its design and type, as brought into circulation by us.

In case of alteration of the product, not agreed upon by us, this declaration will lose its validity

Description:	Oil Filled Radiator
Model:	DEF973987/ OR02T-11 Fins
Serial Number:	N/A
Rated input voltage:	220-240 V AC 50 Hz
Rated power input:	2500 W
Applicable EC Directives:	EC Directive of Electromagnetic Compatibility 2004/108/EC
Tested according to:	EN 55014-1:2006 EN 55014-2:1997+A1+A2 EN 61000-3-2:2006 EN 61000-3-3:2008

Mc Loughlins

Since 1958

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for re-cycling.



www.devielle.ie